Timekettle

Timekettle LiveTalk

User Manual · Model TMK009

Please read this manual before using the product and keep it for future reference. This guide will help you understand and use your device correctly.

1. App Download

Download the Timekettle App from your App Store to access translation features, customize touch controls, adjust sound effects, update firmware, and explore more. Note: If the earbuds cannot connect to the Timekettle App, try reinstalling the App or updating it to the latest version.

How to Download

Timekettle APP

Timekettle

GET IT ON Google Play

Download on the App Store

Google and and the Google Play logo are trademarks of Apple Inc.
Apple and the Apple logo are trademarks of Apple Inc.

1.**Scan QR code:** Use your phone to scan the QR code in the app, which will take you directly to the download page.
2.**Search in App Store:** Search for "Timekettle" in the App Store or Google Play.
Tip: The app defaults to Guest Mode no login required to use core translation features. You can sign in for additional features.

Note: On first launch, the app will guide you through Bluetooth pairing and permission setup. Please follow the on-screen prompts.

2. Product Overview

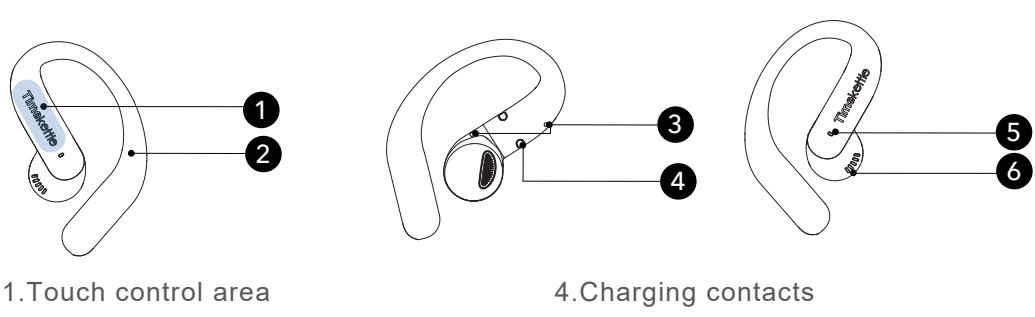

1.Touch control area
2.Ear hook
3.Microphone
4.Charging contacts
5.LED indicator (single white)
6.Sound outlet

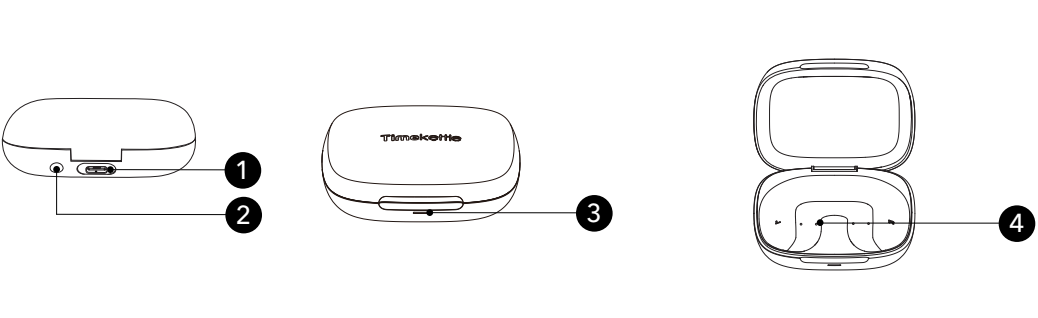

1.USB-C charging port
2.Case button
3.LED indicator (white + red dual-color)
4.Case charging contacts

3. Power On & Pairing

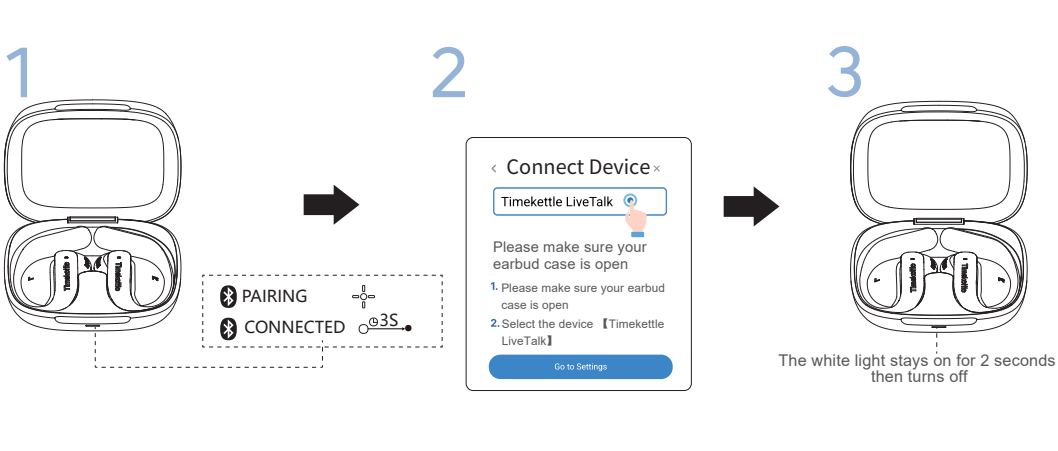
1
PAIRING
CONNECTED
3S
2
Connect Device
Timekettle LiveTalk
Please make sure your earbud case is open
1. Please make sure your earbud case is open
2. Select the device 【Timekettle LiveTalk】
Go to Settings
3

The white light stays on for 2 seconds then turns off

1.Open the charging case. The earbuds will power on automatically and begin left-right interconnection. Once connected, both earbuds flash three times simultaneously, then the white light slowly blinks, indicating Pairing Mode.
2.Follow the in-app guide to pair your earbuds in the Timekettle App.
3.Once paired, the white LED stays lit for 2 seconds then turns off, and a connection tone plays.

Note: Once connected the earbuds will reconnect automatically every time you open the case as long as the pairing record on your device has not been deleted.

Note: If the earbuds are not connected to any device within 10 minutes of powering on, they will turn off automatically.

4. Dual-Device Connection

To connect the earbuds to two Bluetooth devices simultaneously:



Method 1 — Using the Case Button

While already connected to Device A, place the earbuds in the case. Press and hold the case button for 3 seconds to enter Pairing Mode, then connect to a second device.

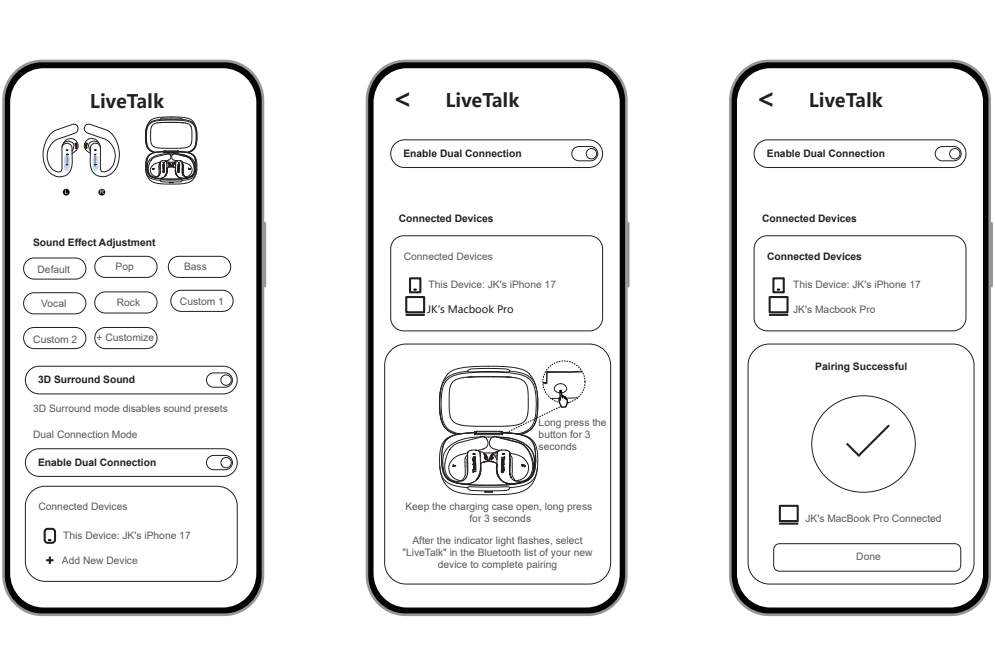
LiveTalk
Sound Effect Adjustment
Default
Pop
Bass
Vocal
Rock
Custom 1
Custom 2
+ Customize
3D Surround Sound
3D Surround mode disables sound presets
Dual Connection Mode
Enable Dual Connection
Connected Devices
This Device: JK's iPhone 17
Add New Device
LiveTalk
Enable Dual Connection
Connected Devices
This Device: JK's iPhone 17
JK's Macbook Pro
Long press the button for 3 seconds
Keep the charging case open, long press for 3 seconds
After the indicator light flashes, select "LiveTalk" in the Bluetooth list of your new device to complete pairing
LiveTalk
Enable Dual Connection
Connected Devices
This Device: JK's iPhone 17
JK's Macbook Pro
Pairing Successful
JK's MacBook Pro Connected
Done

Method 2 — Using the Timekettle App

In the Timekettle App, tap the device icon on the home screen to enter the device details page. Enable Dual Connection, then tap "Add New Device".

Note: If the earbuds are already connected to two devices, please disconnect at least one before pairing with a new device.

5. Manual Pairing

To manually enter Bluetooth Pairing Mode:



1. Place the earbuds in the charging case.
2. Keep the case open and press and hold the case button for 3 seconds.
3. The case LED flashes white three times then turns off; the earbuds enter Pairing Mode with the white light rapidly blinking (0.3 s on/0.3 s off).
4. Select the device name in your phone's Bluetooth list to complete pairing.

6. Wearing Guide

This product features an ergonomic open-ear hook design — no in-ear insertion required. Each earbud weighs only approx. 6.9 g for all-day comfort.



How to Wear:
1. Identify left (L) and right (R) earbuds; hold the earbud and align it with your ear.
2. Hook the ear hook over the top of your ear and rotate it along the outer ear until it sits comfortably.
3. Adjust the hook angle so the sound outlet faces your ear canal and the fit is secure.



Incorrect Fit the ear hook rests snugly against your ear with the sound outlet pointing toward the ear canal.
Incorrect fit: the hook does not touch the ear, or the sound outlet faces away.

7. Cleaning

After each use, wipe the earbuds with a soft, dry cloth and clean the charging contacts with a cotton swab to prevent charging and power-off issues caused by sweat accumulation.



- •Do not use cleaners containing alcohol or corrosive substances.
- •Do not submerge the earbuds in water.
- •Clean the sound outlet mesh regularly to maintain audio quality.

8. Translation Features

Note: Before using translation ensure the earbuds are connected to the Timekettle App, and your phone has a working internet connection (offline translation excepted).

Supported Languages

Timekettle LiveTalk — Supported Languages (52 Languages / 106 Accents)

52 Languages Online · 106 Accents · 13 Offline Language Pairs

Region	Sub-region	Language	Supported Countries / Accents	Accents
Asia	East Asia	Chinese	Simplified Chinese, Traditional Chinese	2
Asia	East Asia	Cantonese	—	1
Asia	East Asia	Japanese	Japan	1
Asia	East Asia	Korean	South Korea	1
Asia	Southeast Asia	Thai	Thailand	1
Asia	Southeast Asia	Indonesian	Indonesia	1
Asia	Southeast Asia	Malay	Malaysia	1
Asia	Southeast Asia	Vietnamese	Vietnam	1
Asia	Southeast Asia	Filipino	Philippines	1
Asia	Southeast Asia	Burmese	Myanmar	1
Asia	Southeast Asia	Lao	Laos	1
Asia	South Asia	Hindi	India	1
Asia	South Asia	Tamil	India, Sri Lanka, Malaysia, Singapore	4
Asia	South Asia	Bengali	Bangladesh	1
Asia	South Asia	Telugu	India	1
Asia	South Asia	Urdu	Pakistan, India	2
Asia	Central / West Asia	Persian	Iran	1
Asia	Central / West Asia	Turkish	Turkey	1
Asia	Central / West Asia	Uzbek	Uzbekistan	1
Asia	Central / West Asia	Azerbaijani	Azerbaijan	1
Asia	Central / West Asia	Mongolian	Mongolia	1
Europe	Northern Europe	Swedish	Sweden	1
Europe	Northern Europe	Norwegian	Norway	1
Europe	Northern Europe	Danish	Denmark	1
Europe	Northern Europe	Finnish	Finland	1
Europe	Northern Europe	Icelandic	Iceland	1
Europe	Central Europe	German	Germany	1
Europe	Central Europe	Czech	Czech Republic	1
Europe	Central Europe	Slovak	Slovakia	1
Europe	Central Europe	Hungarian	Hungary	1
Europe	Western Europe	English	United States, United Kingdom, Australia, Canada, Ireland, India, New Zealand, Singapore, South Africa, Philippines, Kenya, Tanzania, Ghana, Nigeria	14
Europe	Western Europe	French	France, Canada	2
Europe	Western Europe	Dutch	Netherlands	1
Europe	Western Europe	Portuguese	Portugal, Brazil	2
Europe	Southern Europe	Spanish	Spain, Mexico, Argentina, Colombia, Chile, Peru, Venezuela, Ecuador, Guatemala, Bolivia, Honduras, Paraguay, El Salvador, Nicaragua, Costa Rica, Panama, Puerto Rico, Dominican Republic, Uruguay, United States	20
Europe	Southern Europe	Italian	Italy	1
Europe	Southern Europe	Greek	Greece	1
Europe	Southern Europe	Catalan	Spain	1
Europe	Eastern Europe	Russian	Russia	1
Europe	Eastern Europe	Polish	Poland	1
Europe	Eastern Europe	Ukrainian	Ukraine	1
Europe	Eastern Europe	Croatian	Croatia	1
Europe	Eastern Europe	Romanian	Romania	1
Europe	Eastern Europe	Bulgarian	Bulgaria	1
Europe	Eastern Europe	Slovenian	Slovenia	1
Europe	Eastern Europe	Serbian	Serbia	1
Europe	Eastern Europe	Lithuanian	Lithuania	1
Europe	Eastern Europe	Latvian	Latvia	1
Europe	Eastern Europe	Albanian	Albania	1
Middle East	—	Arabic	Saudi Arabia, UAE, Egypt, Iraq, Jordan, Lebanon, Morocco, Kuwait, Algeria, Tunisia, Oman, Bahrain, Qatar, Palestine, Israel	15
Middle East	—	Hebrew	Israel	1
Africa	—	Swahili	Kenya, Tanzania	2

13 Offline Language Pairs

*Bidirectional (⇆) · Listening / Simultaneous mode only

#	Series	Language Pair
1	Chinese Series	Chinese ⇆ English
2	Chinese Series	Chinese ⇆ Japanese
3	Chinese Series	Chinese ⇆ Korean
4	Chinese Series	Chinese ⇆ Russian
5	Chinese Series	Chinese ⇆ German
6	Chinese Series	Chinese ⇆ French
7	Chinese Series	Chinese ⇆ Spanish
1	English Series	English ⇆ Japanese
2	English Series	English ⇆ Korean
3	English Series	English ⇆ Russian
4	English Series	English ⇆ German
5	English Series	English ⇆ French
6	English Series	English ⇆ Spanish
Total		13 Pairs

Face-to-Face Translation

1. Open the Timekettle App.
2. Select "Face to Face" Mode.
3. Set the other party's language and your language.
4. One person speaks toward the earbuds - the translation plays through the phone. The other person speaks toward the phone - the translation plays through the earbuds.

Note: Requires an active internet connection; not available in offline mode.



Live Listening Translation

1. Tap "Live Listening" on the home screen to enter this mode.
2. Grant microphone and network permissions on first use.
3. Set the language received on the phone and the language played by the earbuds.
4. Tap "Start" - the earbuds will capture ambient speech and deliver real-time translation to your ears.
5. Tap "Stop" to end translation.

Tip: Live Listening supports AI Timeline Recap — automatically organizes listening content into a thematic summary by timeline. Turn on/off translation's playback is supported



Multi-Media Translation (Audio / Video)

1. Tap "Multi-Media Translation" on the home screen.
2. Ensure both earbuds are connected via Bluetooth.
3. Set the listening language (foreign language) and translation language your native language).
4. Play foreign-language audio or video on your phone - the earbuds will deliver real-time translated audio.

Note: Requires an active internet connection; not available in offline mode.



Voice Call Translation

1. Tap "Voice Call Translation" on the home screen.
2. Ensure both earbuds are connected via Bluetooth.
3. Set the other party's language and your language.
4. Make or receive a call - the app will automatically provide real-time translation of the conversation.
5. An auto-greeting can be set to play automatically when a call connects.

Note: Requires an active internet connection; not available in offline mode.



9. Touch Controls

Default Touch Settings

Music Mode

	Gesture	Left Ear	Right Ear
♫	Double-tap	Play / Pause	Play / Pause
	Triple-tap	Previous track	Next track
	Long press (2 s)	Voice assistant	Voice assistant

Call Mode

☎	Double-tap	Answer call	Answer call
	Long press (2 s)	Hang up / Reject	Hang up / Reject

Customize touch controls in the Timekettle App under Controls on the home screen. Triple-tap and long -press gestures can be assigned to:
- · Previous track
- · Next track
- · Voice assistant
- · Disabled

Note: The double-tap gesture (Play/Pause, Answer call) is fixed and cannot be customized.

10. EQ Settings

Customize the sound profile in the Timekettle App to match your listening preference.

Preset Modes

Six preset EQ modes are available with one-click switching. When Translation Mode is enabled, the unit automatically switches to Translation EQ. It produces clearer and more transparent audio so you can hear translation announcements clearly even in noisy environments.



Custom EQ

1. Tap "+ Custom" to open the custom EQ editor.
2. You can create your own sound profile by adjusting the sliders in Custom EQ.
3. Tap "Apply" in the top-right corner to save. You can name it (e.g., "Custom 1").
4. Saved custom presets appear below the default list and can be deleted.

Note: EQ adjustment requires the earbuds to be connected to the Timekettle App.

11. Find Earbuds

When your earbuds are left nearby, you can play a prompt tone via the Timekettle APP to locate them.



Steps

1. Open the Timekettle App, go to the device details page, and tap "Find Earphones".
2. Tap "Play Sound" to trigger a high-pitched alert on the left (L) or right (R) earbud individually.
3. Once you have located the earbuds using the LED flash and sound direction, tap Stop.

A Warning: Remove the earbuds before using the Find Earphones function to avoid hearing damage from the high-pitched alert.

Note: Find Earphones requires the earbuds to be powered on and Bluetooth-connected. This feature is unavailable if the earbuds are off or out of Bluetooth range.

12.LED Indicators

Charging Case LED

Scenario	LED Behavior
Earbuds placed in case for charging	Battery >10%: white solid 5 s then off | Battery <10%: red solid 5 s then off
Case charging via USB-C	White blinking (0.5 s on / 0.5 s off) in a loop; Solid white light when fully charged.
Open case lid / single button press	Battery >10%: white solid 5 s then off | Battery <10%: red solid 5 s then off
Close case lid	Battery >10%: white solid 5 s then off | Battery <10%: red solid 5 s then off
Enter Pairing Mode (hold button 3 s)	White fast-blink (0.3 s on / 0.3 s off) in a loop
Factory Reset (hold button 8 s)	White solid 3 s then off

Earbud LED

Scenario	LED Behavior
Charging inside case	White solid 2 s then off
Powered on (awaiting connection)	White slow-blink (0.5 s on / 0.5 s off) in a loop
L–R inter-pairing successful	Both earbuds flash 3 times simultaneously (0.3 s on / 0.3 s off), then resume slow-blink
Bluetooth Pairing Mode	White fast-blink (0.3 s on / 0.3 s off) in a loop
Bluetooth connected	White solid 2 s then off
Connected standby / music playback / on a call	Off (no light)
Disconnected	White slow-blink (0.5 s on / 0.5 s off) for 10 minutes, then powers off
Power off	Left and right red solid 2 s then off
Find Earphones active	White fast-blink (0.3 s on / 0.3 s off) until Find function is stopped

13. Charging

1. Place the earbuds in the charging case and close the lid. Charging begins automatically.
2. Use the included USB-C cable to charge the case. Connect one end to the case's USB-C port and the other to apower adapter (5 V /1 A).



Quick Charge: 10 minutes of charging provides approximately 2 hours of use.
A Warning: Before charging, ensure both the earbuds and the USB-C port are completely dry.

Note: This product does not support wireless charging.

14. Power Off

Place both earbuds back into the charging case and close the lid to power off.

Note: If the earbuds are not connected to any device within 10 minutes of powering on, they will turn off automatically.



15. Reset

If the earbuds malfunction, try resetting them:



If the earbuds malfunction, try resetting them:
1. Place the earbuds in the charging case and keep the lid open.
2. Press and hold the case button for 8 seconds. The earbuds will restore factory settings.
3. After a successful reset, both earbuds flash three times simultaneously (0.3 s on/0.3 s off), then resume slow-blinking and enter Pairing Mode.

Note: After resetting, all saved Bluetooth pairing records will be cleared and you will need to pair your devices again.

16. Firmware Update

When the earbuds are connected to the Timekettle App, you will receive a notification when a firmware update isavailable.
1. Ensure the earbuds have sufficient charge (30% or above recommended).
2. Place the earbuds in the open charging case.
3. Follow the prompts in the Timekettle App to begin the firmware update.
4. Wait for the update to complete. Do not use the earbuds during the update.
A Warning: Do not close the charging case or disconnect Bluetooth during a firmware update, as this may cause devicemalfunction.

17. Specifications

Parameter	Value
Product Name	Timekettle LiveTalk AI Translation Earbuds
Wearing Style	Open-ear hook
Bluetooth Version	BT 5.3 (with LE Audio support)
Bluetooth Codecs	SBC / AAC
Transmission Range	≥ 10 m (open space)
Driver Unit	11 mm composite diaphragm dynamic driver
Frequency Response	20 Hz – 20 kHz
Microphones	4 mics (2 per side), supports ENC call noise cancellation
Single Earbud Weight	Approx. 6.9 g
Charging Case Weight	Approx. 50 g
Earbud Battery	59mAh
Case Battery	500mAh
Music Playback	Single earbud ~8 h / Total ~40 h (at 50% volume)
Translation Use	Single earbud ~8 h / Total ~40 h
Quick Charge	10 min charge ≈ 2 h use
Charging Port	USB-C
Multi-Device	Supports simultaneous dual-device connection
Controls	Touch gestures

18. Customer Support & Warranty

Contact Us

Channel	Details
Official Website	www.timekettle.co
Support Email	support@timekettle.co
Phone (Chinese)	(+86) 400-8088242
Phone (English / Español)	+1 (833) 491-1328

Manufacturer: Shenzhen Timekettle Technologies Co., Ltd.
Address: 801, West Tower, Lepu Building, No. 66,Xingke Road, Nanshan, Shenzhen, China.

Warranty Policy

- •The main unit is covered for 1 year and accessories for 6 months from the date of purchase. Quality issues arising under normal use can be repaired free of charge with a valid order number from an official platform.
- •The warranty does not cover: normal wear and tear, damage caused by improper use not in accordance with this manual, human error, or force majeure.
- •Repairs for damage caused by human error or force majeure, or repairs after the warranty period expires, will incur a service charge.

Safety Information

- • Do not use unofficial or uncertified charging methods; doing so may cause fire, explosion, or other hazards.
- • Avoid dropping, burning, crushing, or submerging the product in liquid, to prevent damage.
- • Do not expose the product to high-temperature environments or place it near heat-generating appliances such as ovens or microwaves.
- • Use the product within an operating temperature of 0°C to 35 °C, and store it within -10 °C to 45 °C
- • Timekettle assumes no responsibility for quality issues, device failure, or safety incidents caused by the use of unofficial or uncertified accessories.
- • Keep out of reach of children. Small parts may pose a choking hazard.
- • Do not disassemble or attempt to repair the product yourself.

Warning: This product generates a strong permanent magnetic field, which may interfere with pacemakers, implantable cardioverter defibrillators (CDs), and other implants. Always keep the parts of this product that contain magnets (earbuds and charging case) at least 10 cm away from pacemakers, ICDs, or other implanted devices.

Warning: To avoid hearing damage, do not listen at high volume for extended periods. Do not raise the volume to a level where you cannot hear surrounding sounds. Do not use earphones while driving.

The content of this manual is subject to change without notice. Timekettle reserves the right of final interpretation.